


Step-by-Step Instructions

Refillable Compatible Cartridges

(PRINT this set of instructions to follow every time you refill your cartridge)

Epson T157X (R3000)

Refillable Compatible Cartridges

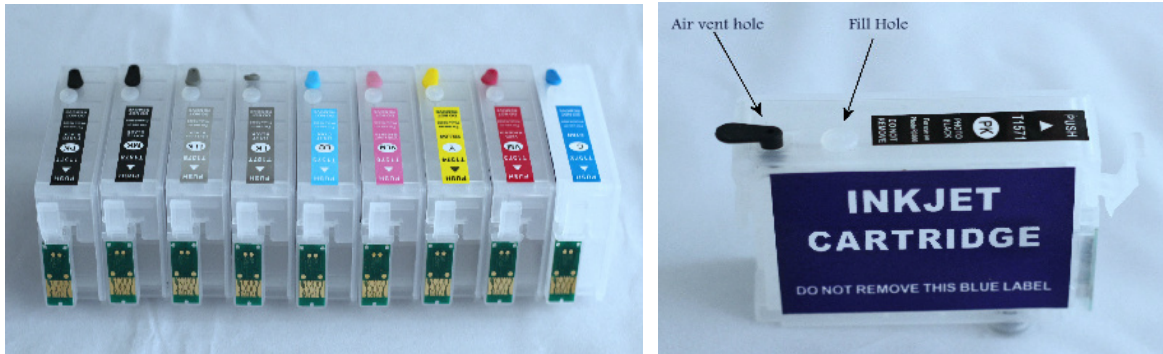

These refill instructions are for the Epson empty refillable cartridges. First buy a combo pack of empty refillables cartridges and the ink that corresponds with these cartridges. These refillable cartridges come with ink in a bundle. These cartridges have an auto reset chip and do not need a chip re-setter. Auto reset means, when the cartridge is removed, refilled, and replaced back into the printer, the chip will read full again.

Important: Use all refillable cartridges together; do not mix them with Epson cartridges.

Items Needed: Photo black, Cyan, Vivid Magenta, Yellow, Light Cyan, Vivid Light Magenta, Light Black, Matt Black, Light Light Black, Syringe with Needle Tip, Paper Towels, Gloves, Review Hints and Tips, and Check List.

Syringe: Attach needle tip to the syringe tightly. Unscrew lid on ink bottle. Puncture silver seal with needle tip making a small hole in the center of seal. Using the correct color pull the correct amount of ink into the syringe. Rinse syringe and needle tip after every use and before using syringe with another color. Rinse syringe and needle tip with water until the water runs clear.

1. Put the cartridges on some paper towels in an area where you can tolerate a spill.
2. Remove the clear filler plug. This is your fill hole.

3. Attach the needle tip into the syringe and fill the syringe with 15ml of the correct color ink. S-L-O-W-L-Y inject the ink into the fill hole of the cartridge until the cartridge is filled about ¼ inch to the top. Leave a ¼ inch air space at the top of the cartridge.
4. Replace the clear filler plug and push it in so the cartridge is air tight.
5. Continue on with steps number 1-3 with the rest of the cartridges.
6. Install the cartridges into the printer and remove the color air vent plug and set aside. Do not remove the plastic on the ink exit port. The printer will poke the hole in the plastic at the bottom of the ink exit port.
7. Run 1-3 cleaning cycles as per printer instructions.

And print the following test pages:

http://www.refills4you.com/support/black_print_test.html Black Ink Test
http://www.refills4you.com/support/color_print_test.html Color ink Test

PLEASE NOTE: If you have tried printing with your cartridge completely out of ink, you may have damaged the printhead. Inkjet printers work by heating a resistor inside the printhead which heats the ink before it is sprayed onto the paper. If there is no ink to keep the resistors cool, you stand the chance of frying them. In your worst case you will need to buy a new cartridge.

AccuBrite, Inc. is not affiliated with the listed printer manufacturers or their subsidiaries. The use by AccuBrite, Inc. does not imply endorsement by or association with the brand name owners. The listed manufacturers, printers and cartridges are used only for the purpose of showing the compatibility of this AccuBrite, Inc. product. All other trademarks, brand names and logos referenced in or on this product are the property of their respective owners. This material is protected by the copyright laws of the United States and other countries. It is illegal to reproduce these instructions. It may not be reproduced, distributed, or altered in any fashion by any entity (either internal or external to AccuBrite), except in accordance with applicable agreements or contracts of licensing, without the express written consent of AccuBrite, Inc.