

## Chip Resetter Compatibility List for Epson Cartridges 5/21/08

Item	Model	Used to following Printer
1	T007	EPSON PHOTO 780/790/870/890/895/1270/1280/1290/900
2	T008	EPSON PHOTO 780/790/870/890/895
3	T009	EPSON PHOTO 1270/1280/1290/900
4	T015	EPSON PHOTO 2000P
5	T016	EPSON PHOTO 2000P
6	T017	EPSON STYLUS C680/685/777
7	T018	EPSON STYLUS C680/685/777
8	T0100	EPSON TM-C100
9	T026	EPSON PHOTO 810/820/925/830U
10	T027	EPSON PHOTO 810/820/925/830U
11	T028	EPSON STYLUS C60/61/CX3100
12	T029	EPSON STYLUS C60/61/CX3100
13	T036	Epson Stylus C42UX/C44UX/C46
14	T037	Epson Stylus C42UX/C44UX/C46
15	T038	EPSON STYLUS C41/C43/C45/CX1500
16	T039	EPSON STYLUS C41/C43/C45/CX1500
17	T040	Epson Stylus CX3200/C62
18	T041	Epson Stylus CX3200/C62
19	T057	EPSON ME 100/1/1+
20	T058	EPSON ME 100/1/1+
21	T066	EPSON STYLUS C48
22	T067	EPSON STYLUS C48
23	T0321	EPSON STYLUS C70/C80/CX5100/CX5300
24	T0322	EPSON STYLUS C70/C80
25	T0323	EPSON STYLUS C70/C80
26	T0324	EPSON STYLUS C70/C80
27	T0331	EPSON STYLUS PHOTO 950
28	T0332	EPSON STYLUS PHOTO 950
29	T0333	EPSON STYLUS PHOTO 950
30	T0334	EPSON STYLUS PHOTO 950
31	T0335	EPSON STYLUS PHOTO 950
32	T0336	EPSON STYLUS PHOTO 950

33	T0341	EPSON STYLUS PHOTO 2100/2200
34	T0342	EPSON STYLUS PHOTO 2100/2200
35	T0343	EPSON STYLUS PHOTO 2100/2200
36	T0344	EPSON STYLUS PHOTO 2100/2200
37	T0345	EPSON STYLUS PHOTO 2100/2200
38	T0346	EPSON STYLUS PHOTO 2100/2200
39	T0347	EPSON STYLUS PHOTO 2100/2200
40	T0348	EPSON STYLUS PHOTO 2100/2200
41	T0422	EPSON STYLUS CX5100/CX5200/5300/5400/C82
42	T0423	EPSON STYLUS CX5100/CX5200/5300/5400/C82
43	T0424	EPSON STYLUS CX5100/CX5200/5300/5400/C82/C82N
44	T0431	EPSON STYLUS CX6400/C84/C86/C64
45	T0441	EPSON STYLUS CX6400/C84/C86/C64/C66/CX4600/CX6600
46	T0442	EPSON STYLUS CX6400/C84/C86/C64/C66/CX4600/CX6600
47	T0443	EPSON STYLUS CX6400/C84/C86/C64/C66/CX4600/CX6600
48	T0444	EPSON STYLUS CX6400/C84/C86/C64/C66/CX4600/CX6600
49	T0451	EPSON STYLUS CX6600/C86/C66
50	T0452	EPSON STYLUS CX6600/C86/C66
51	T0453	EPSON STYLUS CX6600/C86/C66
52	T0454	EPSON STYLUS CX6600/C86/C66
53	T0461	EpsonStylus C63/65/C83/C85/CX3500/CX4500/CX6500/CX6300
54	T0472	EpsonStylus C63/65/C83/C85/CX3500/CX4500/CX6500/CX6300
55	T0473	EpsonStylus C63/65/C83/C85/CX3500/CX4500/CX6500/CX6300
56	T0474	EpsonStylus C63/65/C83/C85/CX3500/CX4500/CX6500/CX6300
57	T0481	EpsonStylusphoto RX500/RX600//RX620/R300/R300M/R220/R200/R340
58	T0482	EpsonStylusphoto RX500/RX600//RX620/R300/R300M/R220/R200/R340
59	T0483	EpsonStylusphoto RX500/RX600//RX620/R300/R300M/R220/R200/R340
60	T0484	EpsonStylusphoto RX500/RX600//RX620/R300/R300M/R220/R200/R340
61	T0485	EpsonStylusphoto RX500/RX600//RX620/R300/R300M/R220/R200/R340
62	T0486	EpsonStylusphoto RX500/RX600//RX620/R300/R300M/R220/R200/R340
63	T0491	EPSON PHOTO R210/R230/R310/R350/RX510
64	T0492	EPSON PHOTO R210/R230/R310/R350/RX510
65	T0493	EPSON PHOTO R210/R230/R310/R350/RX510
66	T0494	EPSON PHOTO R210/R230/R310/R350/RX510
67	T0495	EPSON PHOTO R210/R230/R310/R350/RX510

68	T0496	EPSON PHOTO R210/R230/R310/R350/RX510
69	T0541	EPSON PHOTO R210/R230/R310/R350/RX510
70	T0542	EPSON PHOTO R210/R230/R310/R350/RX510
71	T0543	EPSON PHOTO R210/R230/R310/R350/RX510
72	T0544	EPSON PHOTO R210/R230/R310/R350/RX510
73	T0547	EPSON PHOTO R210/R230/R310/R350/RX510
74	T0548	EPSON PHOTO R210/R230/R310/R350/RX510
75	T0549	EPSON PHOTO R210/R230/R310/R350/RX510
76	T0540	EPSON PHOTO R210/R230/R310/R350/RX510
77	T0551	EPSON PHOTO RX420/RX425/R240/RX520
78	T0552	EPSON PHOTO RX420/RX425/R240/RX520
79	T0553	EPSON PHOTO RX420/RX425/R240/RX520
80	T0554	EPSON PHOTO RX420/RX425/R240/RX520
81	T5570	EPSON PICTUREMATE Print500
82	T0561	Epson Stylus RX430 Multifunction/Epson stylus photo R250
83	T0562	Epson Stylus RX430 Multifunction/Epson stylus photo R250
84	T0563	Epson Stylus RX430 Multifunction/Epson stylus photo R250
85	T0564	Epson Stylus RX430 Multifunction/Epson stylus photo R250
86	T0591	EPSON STYLUS PHOTO R2400
87	T0592	EPSON STYLUS PHOTO R2400
88	T0593	EPSON STYLUS PHOTO R2400
89	T0594	EPSON STYLUS PHOTO R2400
90	T0595	EPSON STYLUS PHOTO R2400
91	T0596	EPSON STYLUS PHOTO R2400
92	T0597	EPSON STYLUS PHOTO R2400
93	T0598	EPSON STYLUS PHOTO R2400
94	T0599	EPSON STYLUS PHOTO R2400
95	T5591	EPSON STYLUS PHOTO RX700
96	T5592	EPSON STYLUS PHOTO RX700
97	T5593	EPSON STYLUS PHOTO RX700
98	T5594	EPSON STYLUS PHOTO RX700
99	T5595	EPSON STYLUS PHOTO RX700
100	T5596	EPSON STYLUS PHOTO RX700
101	T0601	EPSON STYLUS C68/C88/ CX3800/ CX3810/CX4200/CX4800/CX7800
102	T0602	EPSON STYLUS C68/C88/ CX3800/ CX3810/CX4200/CX4800/CX7800

103	T0603	EPSON STYLUS C68/C88/ CX3800/ CX3810/CX4200/CX4800/CX7800
104	T0604	EPSON STYLUS C68/C88/ CX3800/ CX3810/CX4200/CX4800/CX7800
105	T0611	EPSON STYLUS D88/DX3800/DX4800
106	T0612	EPSON STYLUS D88/DX3800/DX4800
107	T0613	EPSON STYLUS D88/DX3800/DX4800
108	T0614	EPSON STYLUS D88/DX3800/DX4800
109	T0621	EPSON STYLUS C67/C87/CX3700/CX4100/CX4700
110	T0631	EPSON STYLUS C67/C87/CX3700/CX4100/CX4700
111	T0632	EPSON STYLUS C67/C87/CX3700/CX4100/CX4700
112	T0633	EPSON STYLUS C67/C87/CX3700/CX4100/CX4700
113	T0634	EPSON STYLUS C67/C87/CX3700/CX4100/CX4700
114	T0841	Epson ME photo 20
115	T0842	Epson ME photo 20
116	T0843	Epson ME photo 20
117	T0844	Epson ME photo 20
118	T0711	Epson Stylus D78/DX4000/DX4050/DX5000/DX6000
119	T0712	Epson Stylus D78/DX4000/DX4050/DX5000/DX6000
120	T0713	Epson Stylus D78/DX4000/DX4050/DX5000/DX6000
121	T0714	Epson Stylus D78/DX4000/DX4050/DX5000/DX6000
122	T0771	EPSON STYLUS PHOTO R260/R380/RX580/R280
123	T0772	EPSON STYLUS PHOTO R260/R380/RX580/R280
124	T0773	EPSON STYLUS PHOTO R260/R380/RX580/R280
125	T0774	EPSON STYLUS PHOTO R260/R380/RX580/R280
126	T0775	EPSON STYLUS PHOTO R260/R380/RX580/R280
127	T0776	EPSON STYLUS PHOTO R260/R380/RX580/R280
128	T0781	EPSON STYLUS PHOTO R260/R380/RX580/R280
129	T0782	EPSON STYLUS PHOTO R260/R380/RX580/R280
130	T0783	EPSON STYLUS PHOTO R260/R380/RX580/R280
131	T0784	EPSON STYLUS PHOTO R260/R380/RX580/R280
132	T0785	EPSON STYLUS PHOTO R260/R380/RX580/R280
133	T0786	EPSON STYLUS PHOTO R260/R380/RX580/R280
134	T0791	EPSON STYLUS PHOTO 1400
135	T0792	EPSON STYLUS PHOTO 1400
136	T0793	EPSON STYLUS PHOTO 1400
137	T0794	EPSON STYLUS PHOTO 1400

138	T0795	EPSON STYLUS PHOTO 1400
139	T0796	EPSON STYLUS PHOTO 1400
140	T0801	EPSON STYLUS PHOTO R265/R360/R285
141	T0802	EPSON STYLUS PHOTO R265/R360/R285
142	T0803	EPSON STYLUS PHOTO R265/R360/R285
143	T0804	EPSON STYLUS PHOTO R265/R360/R285
144	T0805	EPSON STYLUS PHOTO R265/R360/R285
145	T0806	EPSON STYLUS PHOTO R265/R360/R285
146	T0881	EPOSN STYLUS CX4400/CX7400/CX4450
147	T0882	EPOSN STYLUS CX4400/CX7400/CX4450
148	T0883	EPOSN STYLUS CX4400/CX7400/CX4450
149	T0884	EPOSN STYLUS CX4400/CX7400/CX4450
150	IC1BK05	Epson PM 800/800DC/820/820DC/3300C
151	IC5CL05	Epson PM 800/800DC/820/820DC
152	IC5CL06	Epson PM 3300C
153	IC1BK10	Epson PM 900C/ 920C
154	IC6CL10	Epson PM 900C/ 920C
155	IC1BK12	Epson CC 500L/ 550L
156	IC3CL12	Epson CC 500L/ 550L
157	IC1BK13	PM-730C/740C/740DU/830C/840C/850PT/860PT
158	IC5CL13	PM-730C/740C/740DU/830C/840C/850PT/860PT
159	ICBK21	PM-930C/940C/950C/970C/980C
160	ICC21	PM-930C/940C/950C/970C/980C
161	ICM21	PM-930C/940C/950C/970C/980C
162	ICY21	PM-930C/940C/950C/970C/980C
163	ICLC21	PM-930C/940C/950C/970C/980C
164	ICLM21	PM-930C/940C/950C/970C/980C
165	ICDY21	PM-950C/970C/980C
166	ICBK22	PX-V700. CC-600PX
167	ICC22	PX-V700. CC-600PX
168	ICM22	PX-V700. CC-600PX
169	ICY22	PX-V700. CC-600PX
170	ICBK23	PM-4000PX
171	ICC23	PM-4000PX
172	ICM23	PM-4000PX

173	ICY23	PM-4000PX
174	ICLC23	PM-4000PX
175	ICLM23	PM-4000PX
176	ICGY23	PM-4000PX
177	ICMB23	PM-4000PX
178	ICBK28	CL-760
179	ICCL28	CL-760
180	ICBK29	CC-570
181	ICCL29	CC-570
182	ICBK31	PX-V600
183	ICC31	PX-V600
184	ICM31	PX-V600
185	ICY31	PX-V600
186	ICBK32	PM-A850/D750/G700/G800
187	ICC32	PM-A850/D750/G700/G800
188	ICM32	PM-A850/D750/G700/G800
189	ICY32	PM-A850/D750/G700/G800
190	ICLC32	PM-A850/D750/G700/G800
191	ICLM32	PM-A850/D750/G700/G800
192	ICBK33	PX-G900
193	ICC33	PX-G900
194	ICM33	PX-G900
195	ICY3	PX-G900
196	ICBL33	PX-G900
197	ICR33	PX-G900
198	ICGL33	PX-G900
199	ICMB33	PX-G900
200	ICBK35	PM-A900/D1000
201	ICC35	PM-A900/D1000
202	ICM35	PM-A900/D1000
203	ICY35	PM-A900/D1000
204	ICBL35	PM-A900/D1000
205	ICR35	PM-A900/D1000
206	ICBK46	Epson PX-A620/A720/A740/A780
207	ICC46	Epson PX-A620/A720/A740/A780

208	ICM46	Epson PX-A620/A720/A740/A780
209	ICY46	Epson PX-A620/A720/A740/A780
210	ICBK50	Epson PM-D870/G850/A920/A820/G4500
211	ICC50	Epson PM-D870/G850/A920/A820/G4500
212	ICM50	Epson PM-D870/G850/A920/A820/G4500
213	ICY50	Epson PM-D870/G850/A920/A820/G4500
214	ICLC50	Epson PM-D870/G850/A920/A820/G4500
215	ICLM50	Epson PM-D870/G850/A920/A820/G4500
		<p>AccuBrite, Inc. is not affiliated with the listed printer manufacturers or their subsidiaries. The use by AccuBrite, Inc. does not imply endorsement by or association with the brand name owners. The listed manufacturers, printers and cartridges are used only for the purpose of showing the compatibility of this AccuBrite, Inc. product. All other trademarks, brand names and logos referenced in or on this product are the property of their respective owners. This material is protected by the copyright laws of the United States and other countries. It is illegal to reproduce these instructions. It may not be reproduced, distributed, or altered in any fashion by any entity (either internal or external to AccuBrite), except in accordance with applicable agreements or contracts of licensing, without the express written consent of AccuBrite, Inc.</p>
		Copyright © AccuBrite, Inc. 2003-2008. All rights reserved









