


Step-by-Step Instructions

(PRINT this set of instructions to follow every time you refill your cartridge)

Lexmark Color #24A (18C1524),
#29A (18C1529), #33 (18C0033),
#35 (18C0035), #41A, #43 (18Y0143)

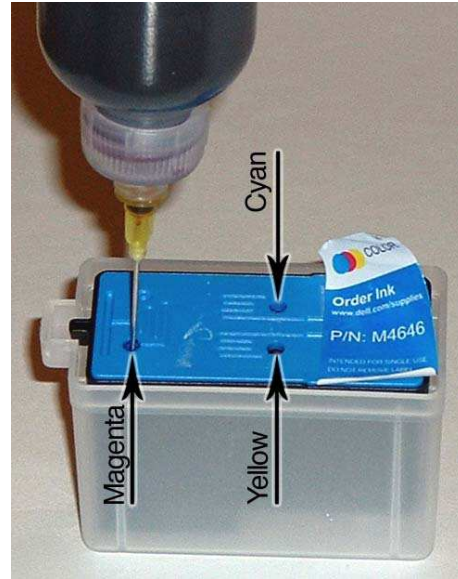

Items needed: gloves, hand-drill, #6 refill station, cyan, magenta & yellow ink, paper towels, review hints & tips and check list Note: Do not use the refill station lid for refilling this cartridge. Do not plug fill-hole

Syringe: Attach needle tip (located inside station # 4) to the syringe tightly. Unscrew lid on ink bottle. Puncture silver seal with needle tip making a small hole in the center of seal. Using the correct color pull the correct amount of ink into the syringe. Rinse syringe and needle tip after every use and before using syringe with another color. Rinse syringe and needle tip with water until the water runs clear.

Note: Follow the maze on the top of your cartridge to the small fill hole. There is a maze for each of the 3 fill holes. Make these holes bigger using the hand drill located inside station # 4 in your parts pack.

1.) Place cartridge in Station #6 with copper circuits facing to the left and the plastic feet inside the bottom of the station to your right. **Do not use the refill station lid for refilling this cartridge.** Peel back the label on top of the cartridge. Under label are three holes. These are your fill holes. One by one, insert drill into each of the three holes and drill down into the inkjet cartridge. Make sure the drill goes thru the small hole making

room for the bottle tip. You will have three fill holes for this cartridge. Rinse and dry drill after inserting into each color chamber. Fill holes with colors using picture as shown.

2.) Insert the correct color ink using the syringe inside of each of the fill-holes. See picture and fill colors as shown. S-l-o-w-l-y inject 6 ml of ink into each of the three fill-holes. If ink begins to "bubble" out of the fill-hole, remove bottle tip. **As you inject the ink withdraw and re-insert the syringe at different angles in order to expose the whole sponge to the ink.** Bubbling occurs when a cartridge is either over-filled or if ink is being inserted too quickly. Wait several minutes and then try to slowly insert more ink. If ink begins to bubble out the fill-hole or leak from the printhead, you have plenty of ink in the cartridge. A little ink might come out of the top when full, so cover up the other holes while filling one.

3.) After refilling, remove cartridge from refill station. Place cartridge upright on folded paper towels with the printhead facing down toward the paper towel. Do not let the printhead touch the paper towel. It maybe necessary to tilt the cartridge slightly so printhead is not in contact with paper towel. Let cartridge sit for approximately 20 minutes after refilling before putting cartridge back into printer.

For best results, let cartridge sit for 8 hours after refilling so the ink can saturate the entire sponge.

4.) Do not plug fill-hole. If the fill-holes are plugged, a slight vacuum is created. This can result in interrupted print or no print. If you place the Lexmark label or piece of tape over the top of the refilled cartridge & cover the holes, please use the drill to poke a hole through the label or tape of one hole. One of the three holes needs to remain completely open.

5.) Check the ink flow by gently pressing a dry paper towel against the printhead. You should see 3 small lines or dots of each color. If not, gently press a warm, wet Paper towel against the printhead until each color is visible.

6.) When all 3 colors are visible on paper towel, place cartridge back into the printer and run 1-2 print tests. [Or Print 3 pages using:](#)

http://www.refills4you.com/support/black_print_test.html Black ink test

http://www.refills4you.com/support/color_print_test.html Color ink Test

PLEASE NOTE: If you have tried printing with your cartridge completely out of ink, you may have damaged the printhead. Inkjet printers work by heating a resistor inside the printhead which heats the ink before it is sprayed onto the paper. If there is no ink to keep the resistors cool, you stand the chance of frying them. In your worst case you will need to buy a new cartridge.

Important Notice:

Lexmark offers for sale two different versions of the same cartridge:

The regular version (#23, #24, #28, #29, #41, #42) is not refillable. It is the "Return Program" or "Prebate" cartridge. Supposedly, when you buy this cartridge you agree to return the empty cartridge to Lexmark. In return, Lexmark gives you roughly \$5 off the

retail list price of the cartridge.

The "A" version (#23A, #24A, #28A, #29A, #41A, #42A) can easily be refilled. However, the price of the cartridge is roughly \$5 higher than the regular version, so most people unknowingly buy the regular version.

If you want to refill, you will need "A" version cartridges. After refilling the A version if you still get the low ink warning then clean off the sides of your cartridge where the strip is. If it gets ink or oil from your skin on it the printer can not read it, which tells it to print.

AccuBrite, Inc. is not affiliated with the listed printer manufacturers or their subsidiaries. The use by AccuBrite, Inc. does not imply endorsement by or association with the brand name owners. The listed manufacturers, printers and cartridges are used only for the purpose of showing the compatibility of this AccuBrite, Inc. product. All other trademarks, brand names and logos referenced in or on this product are the property of their respective owners. This material is protected by the copyright laws of the United States and other countries. It is illegal to reproduce these instructions. It may not be reproduced, distributed, or altered in any fashion by any entity (either internal or external to AccuBrite), except in accordance with applicable agreements or contracts of licensing, without the express written consent of AccuBrite, Inc.

Copyright © AccuBrite, Inc. 2003-2008. All rights reserved