


Step-by-Step Instructions

(PRINT this set of instructions to follow every time you refill your cartridge)

Hewlett Packard C5011 (#14) Color

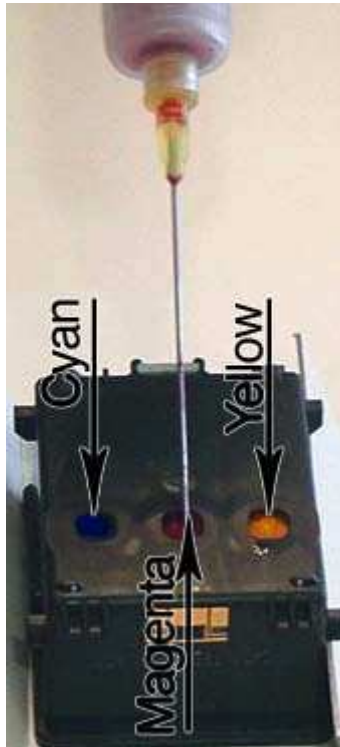

Items Needed: gloves, cardboard station #2, cyan, magenta, yellow ink, paper towels, review hints & tips and check list

Syringe: Attach needle tip (located inside station # 4) to the syringe tightly. Unscrew lid on ink bottle. Puncture silver seal with needle tip making a small hole in the center of seal. Pull the correct amount of ink into the syringe. Rinse syringe and needle tip after every use and before using syringe with another color. Rinse syringe and needle tip with water until the water runs clear.

- 1.) Place the color cartridge upside on cardboard station #2.
- 2.) The exit ports on bottom of cartridge are your fill-holes. See photo
- 3.) Pull the correct amount of ink into the syringe and place the nozzle tip of the syringe slightly above the ink fill-hole and slowly drip the ink into the exposed sponge Cartridge will take 6ml in each chamber. Stop refilling when the sponge does not readily absorb the ink. After refilling, let cartridge remain upside for 30 minutes.
- 4.) After 30 minutes, blot off any excess ink around the fill-hole area. Sit refilled cartridge upright on paper towels with the exit port facing down. Allow cartridge to sit for an additional 15 minutes.
- 5.) Make sure cartridge is not leaking or forming and drip before placing back into printer. If printer asks if cartridge is new, always reply, "yes".

6.) Run 1 to 2 print tests. . Or Print 3 pages using:

http://www.refills4you.com/support/black_print_test.html Black ink test
http://www.refills4you.com/support/color_print_test.html Color ink Test

Note: Information on disabling ink level gauge can be found in your printer manual.

AccuBrite, Inc. is not affiliated with the listed printer manufacturers or their subsidiaries. The use by AccuBrite, Inc. does not imply endorsement by or association with the brand name owners. The listed manufacturers, printers and cartridges are used only for the purpose of showing the compatibility of this AccuBrite, Inc. product. All other trademarks, brand names and logos referenced in or on this product are the property of their respective owners. This material is protected by the copyright laws of the United States and other countries. It is illegal to reproduce these instructions. It may not be reproduced, distributed, or altered in any fashion by any entity (either internal or external to AccuBrite), except in accordance with applicable agreements or contracts of licensing, without the express written consent of AccuBrite, Inc.

Copyright © AccuBrite, Inc. 2003-2008. All rights reserved